

R610

Analogue outputs module



Summary

The R610 is a microprocessor controlled, communicative module with 8 analogue outputs (0...10 V). The module uses a RS485 bus for communication and can be easily integrated in a variety of supervision and control systems.

Application

 HVAC and industrial control systems – analogue signals output for dampers and valves, VAV box control etc.

Function

The outputs of the module are controlled via the communication bus and can be used as eight independent 0...10V voltage outputs. When using 3-wire connection, connect COM to the GO potential. The module may be powered from the same source as the peripherials.

The module communicates by means of a RS485 data bus. The communication protocol ensures smooth and easy integration in a number of control and data acquisition systems. The Modbus register table is available on demand.

The communication circuits are protected against overvoltage. If the module is terminating the communication bus, i.e. it is the last in line, a terminating 120 Ω resistor may be switched on by short-circuiting of the BUS END jumpers. Two LEDs located inside of the housing enable fast diagnostics – power up and communication.

See domat - Technical application notes for connection examples.

All the settings are backed up in a EEPROM chip. The module is equipped with a watchdog circuit and the communication part is galvanically separated.

Technical data

Power 24 V AC/DC ± 20 %

Consumption 3 W

Communication Modbus RTU RS485, 1200...115200 bit/s

Galvanic isolation 1 kV

Max. bus length 1200 m

Max. amount of modules on the bus 256

Number of analogue inputs 8 (0...10 V DC)

Output impedance $> 10k\Omega$

Short-circuit current 20 mA, permanently short-circuit proof

SW ModComTool 4.2.5.6 or higher for parameter setting,

Merbon IDE, SoftPLC IDE – predefined Modbus devices

Housing Polycarbonate box (certification UL94V0)

elbox 4

Terminals screw terminals M3 (power, bus), M2 (analogue outputs)

Dimensions $70.4 \times 98.7 \times 61.5 \text{ mm}$

Protection degree IP20 (EN 60529)

Recommended wire 0.14...1.5 mm²

Ambient temperature external conditions: -5...45 °C; 5...95 % relative humidity;

non-condensing gases and chemically non-aggressive conditions (according to EN 60721-3-3 climatic class 3K5)

storage: -5...45 °C; 5...95 % relative humidity; non-condensing gases and chemically non-aggressive conditions


(according to EN 60721-3-1 climatic class 1K3)

Standards conformity EMC EN 61000-6-2 ed.3:2005, EN 61000-6-4 ed.2:2007 +

A1:2011 (industrial environment)

electrical safety EN 60950-1 ed.2:2006 + A11:2009 + A12:2011 + A1:2010 + A2:2013 + Corr.1:2011-10 hazardous substances reduction EN 50581:2012

Terminals

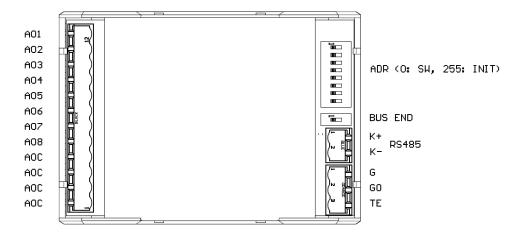

Terminals and connectors

RS485 K+ port COM1 - serial link RS485, positive RS485 K- port COM1 - serial link RS485, negative

G power supplyG0 power supply

TE optional connection for shielding, technical ground

AOC common terminals for AI1...AI8

AO1 ... AO8 input 1...8

LED indication

RUN orange LED – system cycle (OK: LED flashes periodically 1

s ON, 1 s OFF; ERROR: LED flashes in other pattern, LED

is still ON or OFF)

TxD red LED – RS485 transmitting data at COM1 (flashing:

transmitting data; OFF: no data traffic)

PWR green LED – power supply (ON: power OK; OFF: no

power applied, weak or damaged power supply, ...)

DIP switches

ADR AUTO – if all switches are OFF, the address is used

according to Modbus register 4 LSB

USER – address is set by DIP switches configuration INIT - if are all switches ON at power-up, configuration

parameters are set to defaults

DIP 8 = bit 0; switches increase their bit weight from


right to left, see below

BUS END Switch for bus RS485 termination (located at the RS485


connector); ON = bus end; the first and last devices on

bus should have bus end ON

Wiring

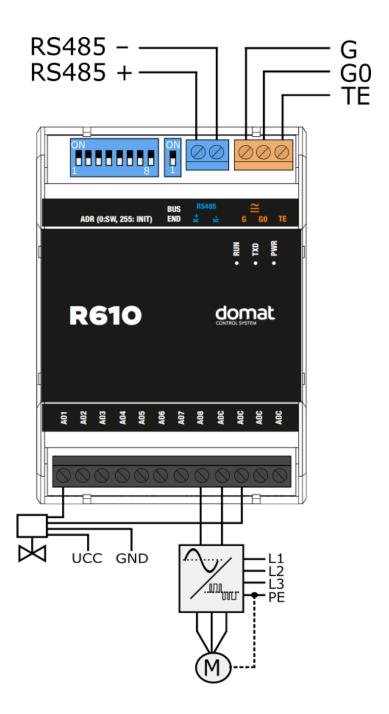

Dimensions

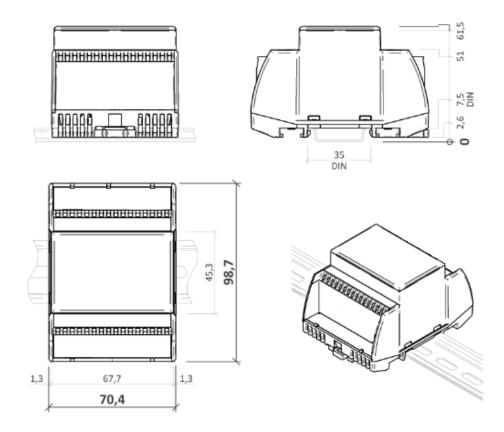


Dimensions are in mm.

Installation

The R610 module is fixed on standard DIN rail (by snapping).


When removing the module from the DIN rail proceed as follows: Place a screwdriver in the plastic slot which is in the middle of bottom part of the module (1). Then push the screwdriver upwards (2). After that, the module can be removed by tilting it upwards (3).

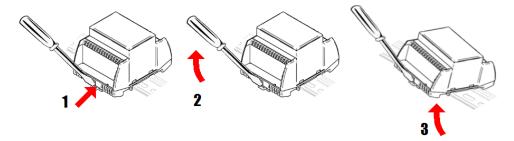


Addressing

The Modbus address can be set as follows:

hardwarewise: using DIP switches. The switches increase their bit weight from right to left, see image with example where address of 21 is set by activation of switches 4, 6, and 8 with bit weight of 16, 4, and 1 respectively. Valid settable range is 1 to 254. Address 0 (all switches OFF) means that the address is set as entered in the Modbus table. Address 255 (all switches ON) brings the module to INIT mode, where Modbus address is 1 and communication parameters are set to N, 8, 1, see image below. All changes apply after the module is switched off and on again.

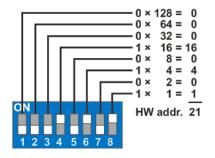

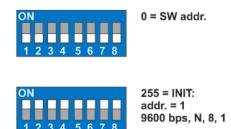

- **softwarewise** using the ModComTool software, available for free at **www.domat.cz**. The default address (factory setting) is 1, default communication parameters are 9600, 8, N, 1. Parity and stopbits can be set in Modbus register 1005 LSB.

The software address is only active if the hardware addressing switch is set to 0.

All changes apply after the module is switched off and on again.

Safety note

The device is designed for monitoring and control of heating, ventilation, and air conditioning systems. It must not be used for protection of persons against health risks or death, as a safety element, or in applications where its failure could lead to physical or property damage or environmental damage. All risks related to device operation must be considered together with design, installation, and operation of the entire control system which the device is part of.

Changes in 11/2019 – First datasheet version.

versions 01/2020 – Power supply description amended.

08/2021 – Stylistic adjustments, change of logo.